



Presentation:

SOUR WATER STRIPPING UNIT

SOUR WATER STRIPPING UNIT

Main purpose of the sour water stripping unit is to cut-down the H_2S / NH_3 concentration in the sour water (discharged to the river).

Sour water enters the stripping column, heated by steam. Undesirable compounds are striped off from the feed.

These compounds leave the head of the column and enter the Sulphur Recovery Unit or the Flare System. Purified water leaves the column at the bottom.

**Contact**

(+420)720 332 266
info@boilen.cz
www.boilen.cz

**Address**


Chotěšovská 680/1, Letňany,
190 00 Praha 9
Czech Republic

**Company**

Boilen s.r.o.
ID. No.: 09828192

SOUR WATER STRIPPING UNIT

TYPICAL PROCESS FLOW SCHEME

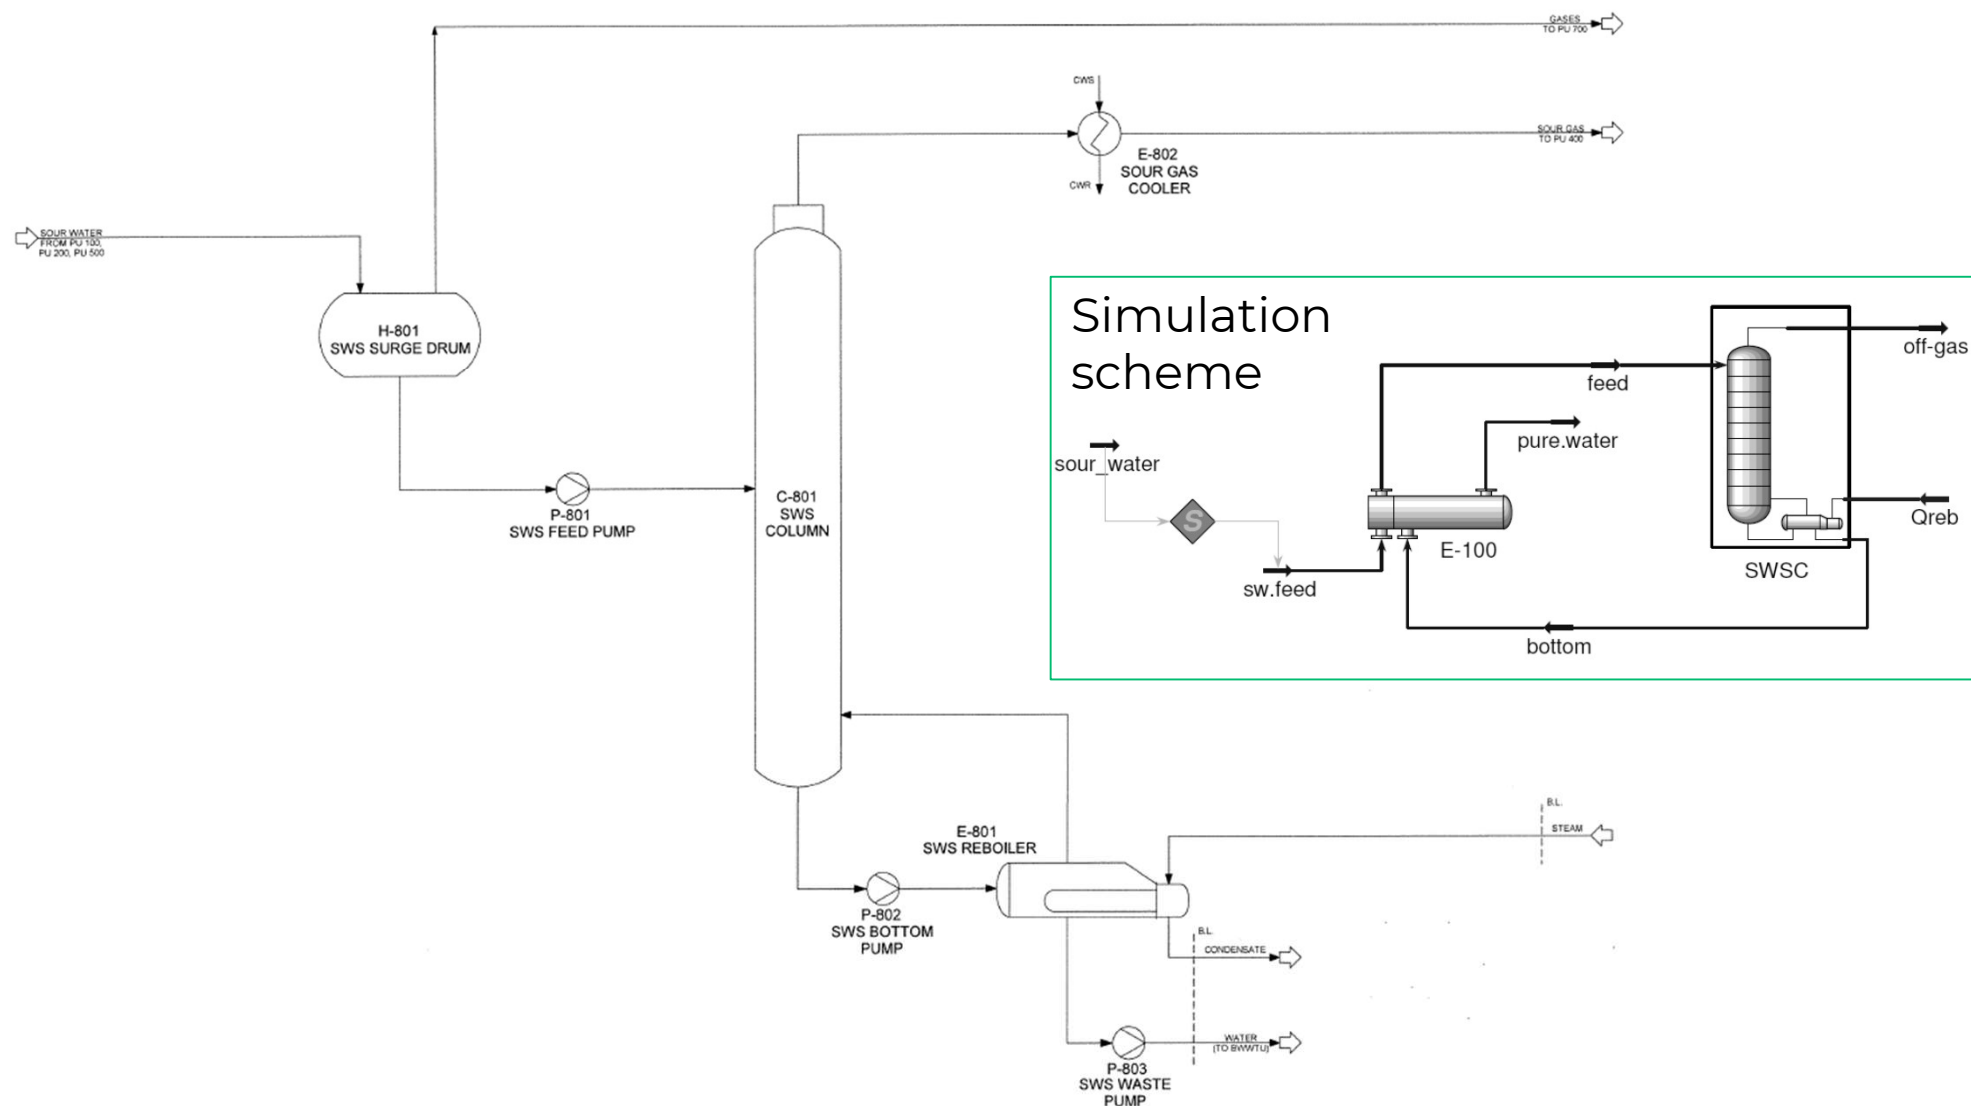

Contact
 (+420)720 332 266
 info@boilen.cz
 www.boilen.cz

Address
 Chotěšovská 680/1, Letňany,
 190 00 Praha 9
 Czech Republic

Company
 Boilen s.r.o.
 ID. No.: 09828192

THANK YOU FOR YOUR ATTENTION

**Company**

Boilen s.r.o.
ID. No.: 09828192

**Address**

Chotěšovská 680/1, Letňany Praha 9
Czech Republic

**Contact**

(+420) 720 332 226
info@boilen.cz
www.boilen.cz